


PS5

BACK BUTTON ATTACHMENT

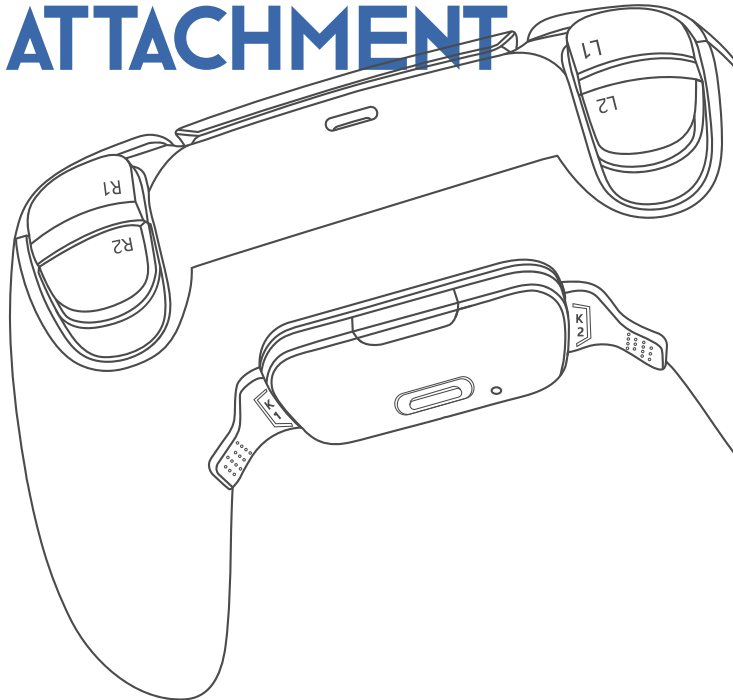

SPECIFICATION

1. The default setting of the 2 paddles are L2, R2.
2. When you make a button map change, the functions of 2 paddles will be changed from Default to the corresponding button you set and will remain until you remap or remove it.

ATTENTION!

Only compatible with the PlayStation 5 Dualsense Controller BDM-010 (CFI-ZCT1*), not for BDM-020 (CFI-ZCT1*A).



HOW TO USE

You can map the 2 paddles with following corresponding buttons: X, O, △, □, L1, L2, R1, R2, Touchpad, D-pad, Left thumbstick/L3 and Right thumbstick/R3.

1. Hold your desired paddle and setting button together for 3 seconds to enter setting mode, then the LED light will blink.
2. Let go of the setting button and paddle and choose a button you want to remap to the corresponding paddle. Then keep pressing the back setting button until the indicator light is off. The changes will take effect immediately.

TO REMOVE THE PADDLE MAPPINGS

1. To remove the remapping setup, hold both the setting button and desired paddle you want to cancel the setup for 3 seconds to enter setting mode. Let go of the setting button and paddle and then long-press the setting button for 3 seconds. The paddle mappings will be removed.

2. To turn off the mapping function, short-press the set button 3 times.

If you need to enable the mapping function again, short-press the set button 3 times to activate the previous setting.

PACKAGE LIST

- 1* Remap Motherboard & Paddles Kit (K1 & K2)
- 1* Re-designed back cover
- 1* Prying Tool
- 1* Phillips Screwdriver & Screws Kit

INSTALLATION GUIDE

 TOMSIN

 <https://www.tomsinus.com/downloads>

OR



NOTE

1. Only compatible with the PlayStation 5 Dualsense Controller BDM-010 (CFI-ZCT1*), BDM-020 (CFI-ZCT1*A) can't use this accessory.
2. Do not attempt to repair or disassemble this product yourself. For returns or customer service regarding this product, please contact the company that is providing the product.